15.6" Quad Split Monitor

4 x 4K HDMI Inputs/ Outputs



User Manual

Product Overview

Thank you for using our broadcast monitor. This full hd monitor includes multi-screen split display, false color, zoom, display rotation, check field, center marker, safety marker, etc. With 4 HDMI inputs and outputs, it can be used with a switcher to meet different user needs.

To insure best use of the unit, please read the user's manual carefully.

CAUTION

- Please use the adapter attached in the accessory, if necessary, please use qualified adapter.
- 2. Please do NOT expose this product directly in the sunlight, heat, and humid conditions.
- 3. Please keep the monitor away from the strong light while using this product to ensure the image effect and long-term use.
- 4. Please avoid heavy impact or drop onto the ground.
- 5. Please do NOT use chemical solutions to clean this product.
 Please wipe the monitor with a clean soft cloth to maintain the brightness of the surface.
- 6. No adjustable components are in the monitor. Please do not take apart or repair the unit by yourself, to avoid the damage of the product.

Product Features


- ◆ Full HD 1920x1080 resolution
- ◆ 4 x 4K HDMI Inputs and Outputs
- Ultra Vivid
- ◆ False Color
- ◆ Center Marker and Safety Marker
- ◆ Image Freeze: The current picture still (capture function)
- ◆ Display Rotate
- ◆ Check Field (Red, Green, Blue, Mono)
- ◆ Display Mode could set 1P, 2P-LR, 2P-TB, PIP, 4P
- ◆ Zoom: Upper Left, Upper Right, Lower Left, Lower Right, Center1, Center2
- ◆ Aspect Ratio could select Full, 16:9, 4:3, 5:4, 1:1
- ◆ Color Temperature (6500K, 5800K, 5500K, User, 9300K, 7500K)
- ◆ Panel buttons (F1~F4) function custom settings
- ◆ Front panel stereo earphone output

CONTENTS


1. Product Description	- 4
1.1 Panel Button Instructions	5
1.2 Interfaces Instructions	6
1.3 Power Input Way	6
1.4 Style	7
1.5 Use with Switcher	. 7
2. Button Shortcut Operation Instructions	- 8
2.1 F1 \sim F4 Shortcut Keys Custom Function Settings	8
2.2 The Quick Adjustment of The Analogs	- 9
3. Menu Operation Instructions	10
4. Menu Function Instructions	10
5. Product Parameters	14
6. Trouble Shooting	15

1. Product Description


• Front Panel Features

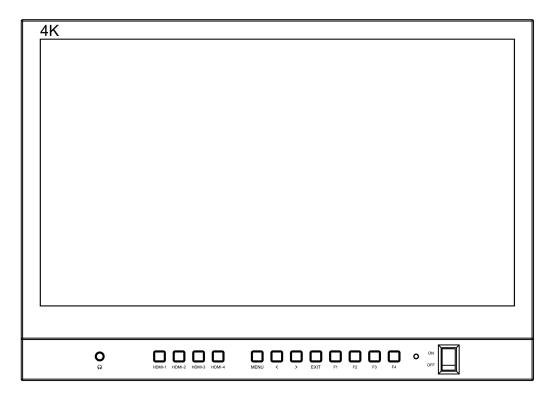

Rear Panel Features

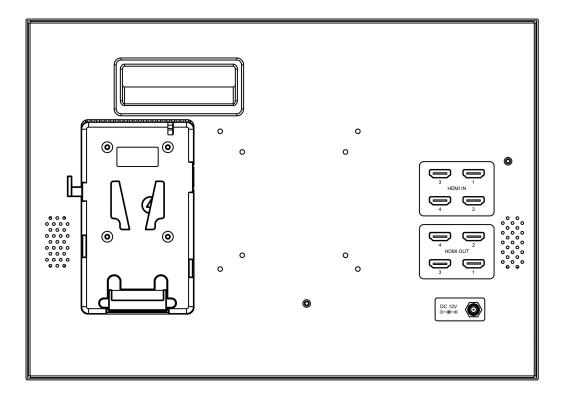


1.1 Panel Button Instructions

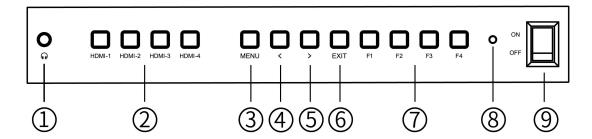

- ①. : Earphone jack output port
- 2. HDMI-1~HDMI-4: HDMI1~4 signal input selection
- ③. MENU: Bring up the main menu, confirm to enter the submenu and adjustment items
- 4. <: Press the < key directly to call up the backlight adjustment item, then press the </> key to adjust the value; Enter the menu for upward selection, or decrease/ adjust the selected parameter.
- ⑤. >: Press the > key directly to call up the backlight adjustment item, and then press the </> key to adjust the value; Enter the menu to select downward, or increase/ adjust the selected parameter.
- ⑥. EXIT: Confirm the adjusted parameters and return to the previous OSD menu
- \bigcirc . **F1~F4**: Custom button F1~F4
- **8. Power Indicator**
- 9. Power ON/ OFF

1.2 Interfaces Instructions

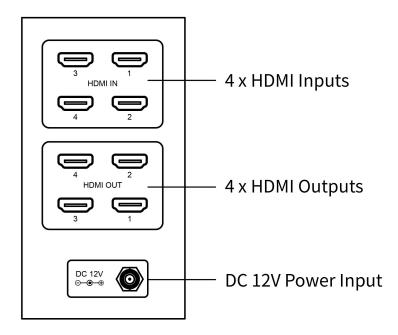

1.3 Power Input Way

- (1) The DC 12V input power port on the back of the monitor supports 12~24V wide voltage and can be powered by a DC power adapter.
- (2) The battery plate on the back of the monitor is equipped with a battery for power supply. The factory default is equipped with a V-mount battery plate.

Remark: According to the different specification of the battery, the capability is different, and the working time for the monitor will be different. Higher capability (working time) will be longer.

Without the charging circuit design for the monitor, please remove the battery to charge with the battery charger.

Suggestion: Better to remove the battery if don't use this product in a long time.

1.4 Style

• Desktop (U Bracket)





• Carry-on






1.5 Use with Switcher

Instructions with ATEM Mini switcher:

Connect 4 HDMI signal sources to this monitor (to help you preview the picture to avoid "blind cut" channel status), then loop 4 HDMI signals to the switcher, and then switch in and play out.

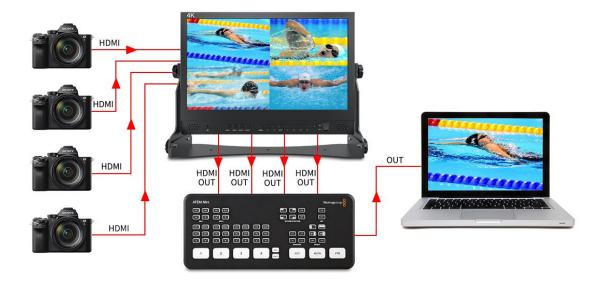

Desktop



Carry-on

2. Button Shortcut Operation Instructions

2.1 F1~F4 Shortcut Keys Custom Function Settings

 $F1\sim F4$ are custom shortcut function buttons, users can customize the function of the buttons.

Operation Mode: short press for shortcut key function

operation, long press for entering shortcut key custom setting.

Take F1 button for example and explain

Long press F1 button, the screen will display:



Use < or > key to selection:

Freeze Ultra Vivid False Color Check Field 2P LR 2P TB 2P PIP 4P Aspect Ratio Disp Rotate Anamorphic Zoom Safety Marker Center Marker Grid Marker


Select one of them, press the **MENU** key to confirm, and then enter the next F button to set.

(You can also set the F shortcut key function in the menu setting.)




2.2 The Quick Adjustment of The Analogs

Press the < or > key to call up the backlight adjustment item:

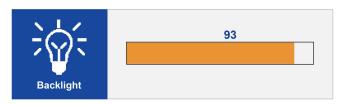

Then press the **MENU** key to switch the analog quantity: **Backlight**, Volume, Brightness, Contrast, Hue, Saturation, Sharpness. Select one of them, press the $\langle l \rangle$ key to adjust the analog value, and then switch the analog quantity to adjust. After the adjustment, press **EXIT** key to confirm and exit.

3. Menu Operation Instructions

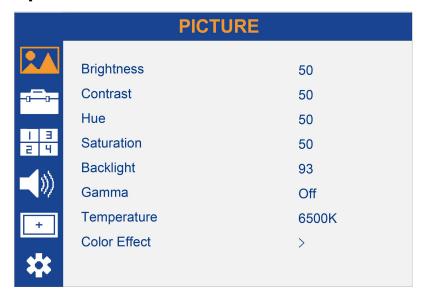

- ①. press the **MENU** key to enter the menu bar, use the < or > key to select the menu item, and press the **MENU** key to enter the secondary menu.
- ②. After entering the secondary menu, use the < or > key to select the adjustment item. Press the **MENU** key to confirm and enter the adjustment item, use the < or > key to adjust the parameter value. After adjustment, press the **EXIT** key to confirm and return to the previous menu, and then enter the next step of selection and adjustment.

4. Menu Function Instructions



Picture

Brightness	0~100
Contrast	0~100
Hue	0~100
Saturation	0~100

Backlight	0~100
Gamma	Off, 1.8, 2.0, 2.2, 2.4
	6500K, 5800K, 5500K, User, 9300K, 7500K
	Under the User , the Red , Green and Blue of the image
Tomporoturo	can be adjusted.
Temperature	Red (0 \sim 255), Green (0 \sim 255), Blue (0 \sim 255)
	(Use the $<$ $l>$ key to select the User, and then press the MENU
	key to enter the User menu.)
	The Hue (0-100) and Saturation (0-100) of the three
Color Effect	primary colors (Red, Green, Blue) and three auxiliary
	colors (Yellow, Cyan, Magenta) of the image can be
	adjusted.
	(Press the MENU key to enter the Color Effect menu.)



Aspect Ratio	Full, 16:9, 4:3, 5:4, 1:1	
Check Field	Off, Red, Green, Blue, Mono	
Anamorphic	Off, x1.33, x1.5, x1.8, x2.0	
	Off, On	
Ultra Vivid	By sharpening the edge of images to help peaking focus operation	
	when shooting.	
Freeze	Off, On	
	Off, Upper Left, Upper Right, Lower Left, Lower Right,	
Zoom	Center1, Center2	
	(Center 1: magnify 4 times; Center 2: magnify 9 times)	
Disp Rotate	0°, 90°, 180°, 270°, H Mirror, V Mirror	
False Color	Off, Mode1, Mode2, Mode3	



Display Mode	1P, 2P LR, 2P TB, 2P PIP, 4P
	When the Display Mode is 2P LR or 2P PIP, you can
	press the MENU key to enter the Display Function menu
	for parameter adjustment.
	● Under the 2P LR , you can adjust:
Display Function	LR Ratio (0∼4)
Display Function	● Under 2P PIP , you can adjust:
	PIP Position (RB, MID, LT, RT, LB)
	PIP Transparency (0 \sim 10)
	PIP Size (0∼10)
	Input Swap (Press MENU key to swap)
	When the display mode is multi-picture mode, you can
Oalest Davis	select one of the pictures to adjust the brightness,
Select Region	contrast, hue, saturation and other parameters of the
	picture.
	Perform signal input switching on the displayed screen.
Input	(Press the MENU key to enter the Input menu to switch the input
	source)
Informatio-	View the corresponding screen input source information.
Information	(Press the MENU key to enter the Information menu to view.)



Audio

Volume	0~100
Mute	Off, On
Audio Source	In multi-picture mode, you can select the input signal of
	one picture as audio output.



Safety Marker	Off, 80%, 85%, 90%, 93%, 96%, 4:3, 2.39:1, 2.35:1,	
	1.85:1	
Center Marker	Off, On	
Grid Marker	Off, 3X3, 6X6	
Line Width	0~10	
Line Color	Red, Green, Blue, White	
Mask	Half, Black, Off	



Language	English, 中文, 日本語	
F1∼F4	False Color, Check Field, 2P LR, 2P TB, 2P PIP, 4P, Aspect Ratio, Disp Rotate, Anamorphic, Zoom, Safety Marker, Center Marker, Grid Marker, Mute, Freeze, Ultra Vivid	
	(You can customize the shortcut key function settings for F1 \sim F4 of the key panel.)	
Transparency	0∼255	
OSD H Position	0~100	
OSD V Position	0~100	
Menu Time	30∼60s	
Reset	Press the MENU button to reset, it will restore the factory default parameter settings.	

5. Product Parameters

Panel Size	15.6"	
Resolution	1920x1080 pixels	
Aspect Ratio	16:9	
Dot Pitch	0.17925 (H) x 0.17925 (V) mm	
Brightness	250cd/m ²	
Contrast	800:1	
Viewing Angle	85°/85°(L/R) 85°/85°(U/D)	
Backlight	LED	
Input	HDMIx4 (support 4K 30Hz)	
Output	HDMIx4 (support 4K 30Hz)	
Audio	3.5mm Stereo Headphone	
	480i/576i/480p/576p	
	720p (60/59.94/50/30/29.97/25/24/23.98)	
HDMI Support Format	1080i (60/59.94/50)	
	1080p (60/59.94/50/30/29.97/25/24/23.98)	
	3840×2160p (30/25/24), 4096×2160p (24)	
Input Voltage	DC12~24V	
Power Consumption	≦12W	
Unit Size	372Lx262Hx28.4D (mm) (without bracket/suitcase)	
Unit Weight	1.57kg (without bracket/suitcase)	
Working Temperature	e -10°C∼50°C	
Storage Temperature	-20°C∼60°C	

6. Trouble Shooting

If there is any problem when using the unit, please try following ways to inspect and solve. Please contact us if you still could not solve it or have other problems.

Without image display

Trouble shooting

◆ HDMI cable off or connect	Check the quality of the cable and make
incorrectly	sure to connect the corresponding input
◆ Without HDMI signal input	Check the signal source and output interface connect is correct or not
◆ Monitor is not be powered on	Check whether the power is connected, put the power switch to " ON " position
◆ Supply voltage instability	Check the power adapter and the battery installation

• Image/color display abnormal

Trouble shooting

◆ HDMI cable poor contact	Replace the HDMI cable and try again
◆ The signal interfered by external environment	Move to another environment to try again
◆ Menu color saturation adjustment	Enter menu to check color, or reset to
closing	factory settings
◆ Check Field set in mono or black & white	Reset Check Field, back to the color
◆ Image deformation	Reset the image aspect ratio

Speaker without sound

Trouble shooting

◆ The HDMI cable off or not	Confirm connected with the
connection properly	corresponding input port
◆ Volume adjustment was closed	Reset the volume control and adjust to a
▼ volume adjustment was closed	proper position
◆ HDMI cable poor connected	Check the quality of cable, or change the
→ Fibivii cable poor confilected	cable and have a try

■ Remark:

- ★ If there are still other problems, please contact our relevant personnel.
- ★ As we are improving our products features, so if there are changes without prior notice.